



# AYL SoundFit Speaker Replacement

Replace the speaker in your AYL SoundFit.

Written By: Sajal Kherde



## INTRODUCTION


Use this guide to replace the speaker of the AYL SoundFit.

---

### TOOLS:

- [Heavy-Duty Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Soldering Workstation](#) (1)
  - [2.5 mm Hex Bit](#) (1)
  - [Solder](#) (1)
  - [Soldering Station](#) (1)
  - [Pro Tech Toolkit](#) (1)
-

## Step 1 — Motherboard

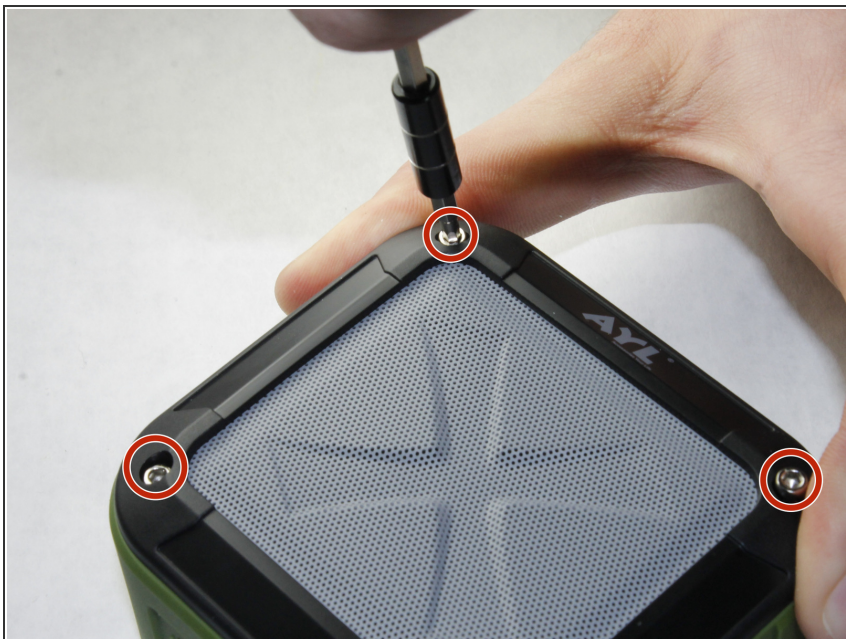

- Unscrew the four hex screws on the top of the device using a 2.5mm hex screwdriver.


## Step 2



- Place a spudger between the black plastic cover and the green case.
- Pry the black cover away from the main casing and remove the cover.




### Step 3

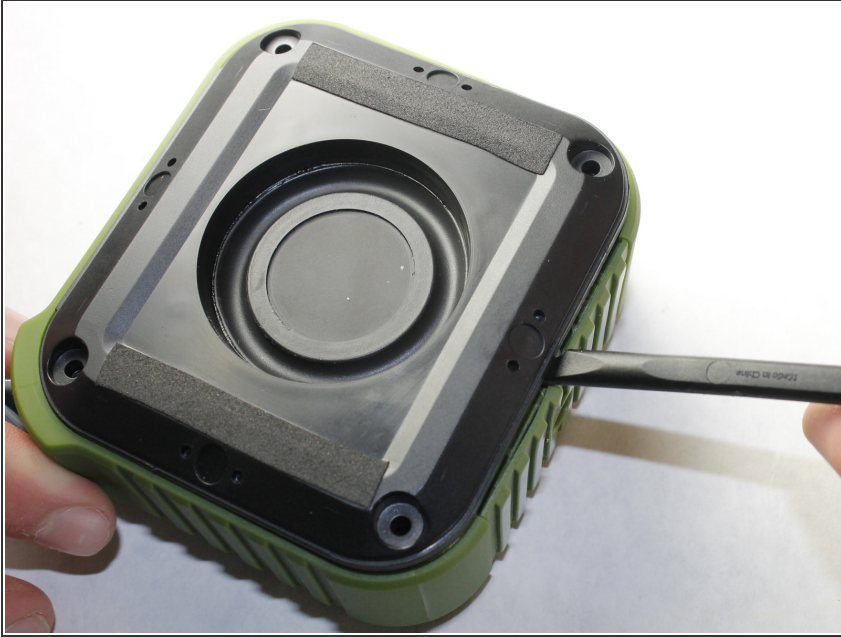

- Place the spudger tool between the black housing, which contains the woofer, and the outer rubber casing.
- Pry the housing away from the body to reveal the motherboard, speaker, and battery.

### Step 4

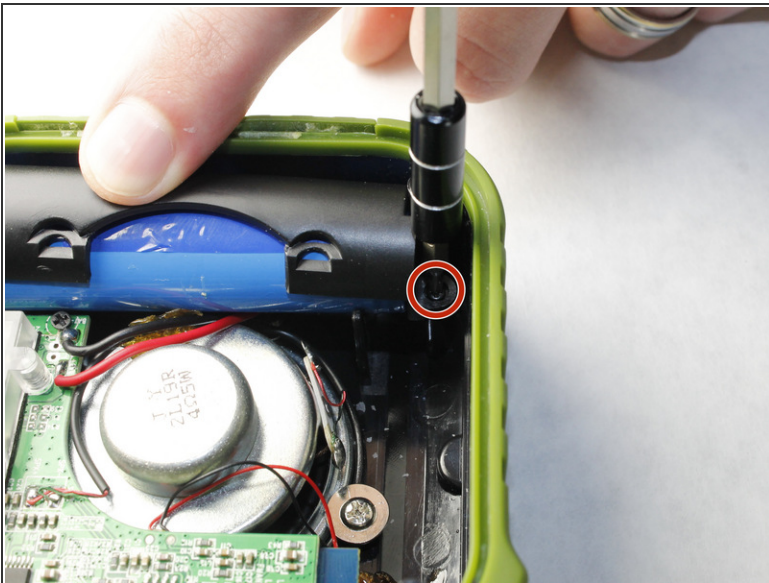




- Remove the two Phillips screws which are holding the battery casing on the housing using a PH00 Phillips screwdriver.
- Remove the battery case to reveal the battery.

## Step 5



- Using a soldering iron, heat up and remove the positive and negative battery contacts from the motherboard.


## Step 6

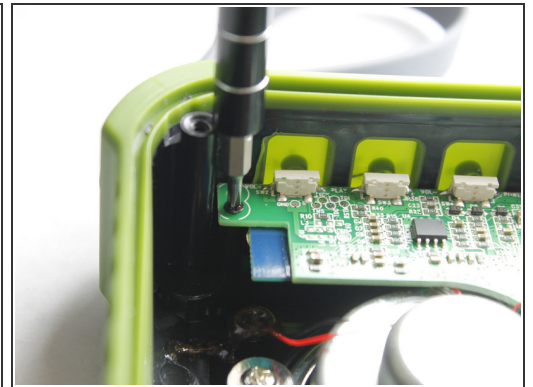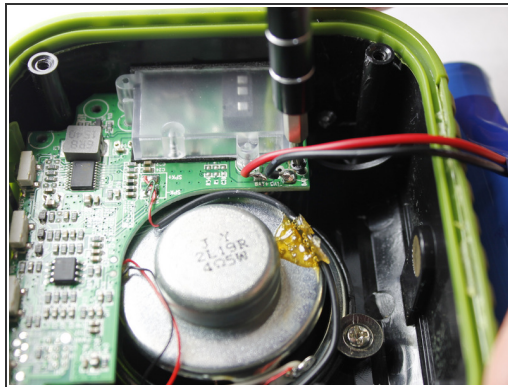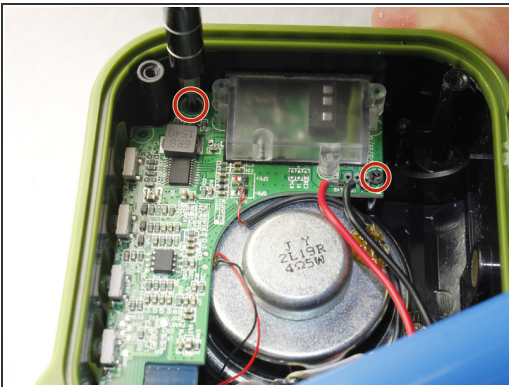

- Remove the three Phillips screws which are holding the motherboard to the base using a PH00 Phillips screwdriver.
- The motherboard can now be wiggled free from the base.




## Step 7 — Speaker

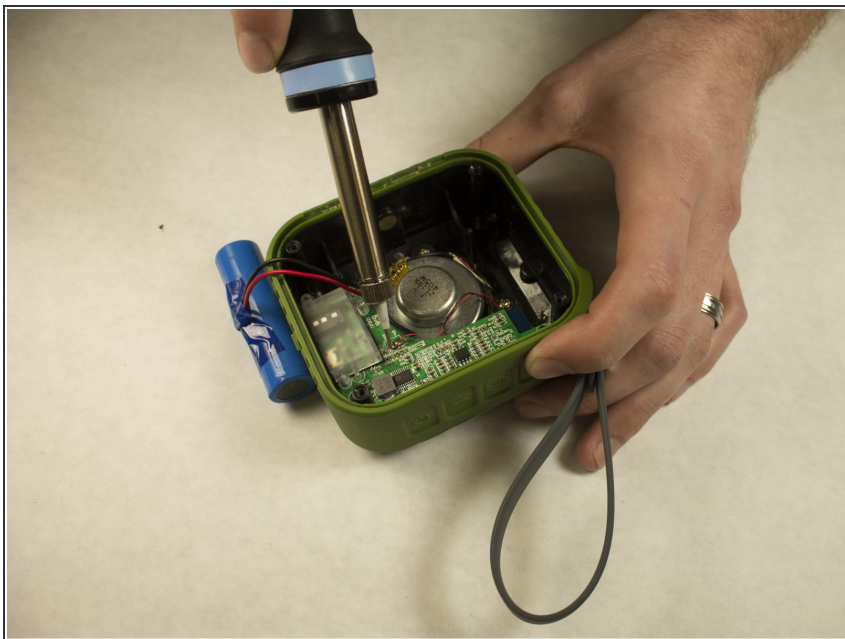

- Using a soldering iron, heat up and remove the positive and negative wire contacts from the motherboard.

## Step 8

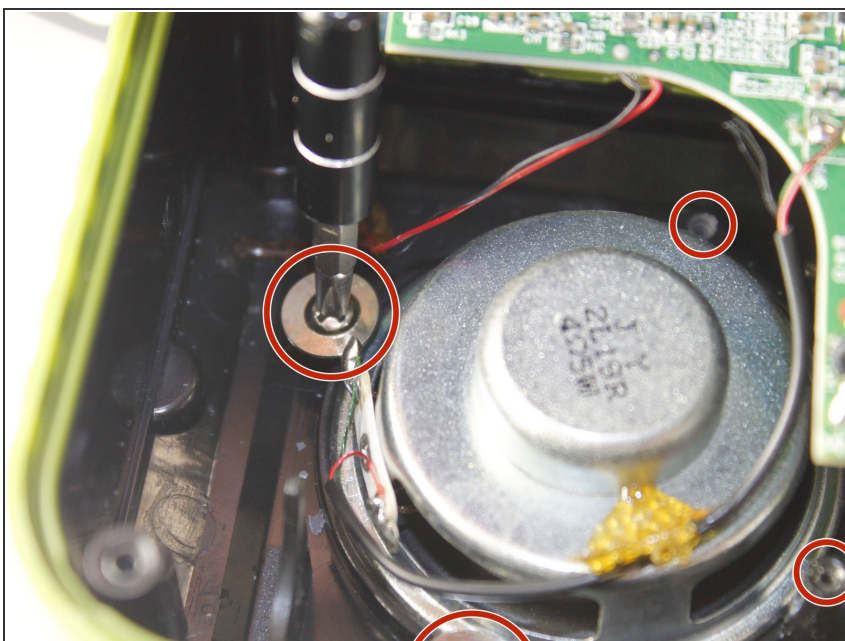

- Remove four Phillips #1 screws to detach the speaker from the module.
- Extract the speaker from the body of the AYL SoundFit.

To reassemble your device, follow these instructions in reverse order.